



**SSE-X3548S/SSE-X3548SR**

**LLDP**

**User's Guide**

Revision 1.14

---

The information in this USER'S GUIDE has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, makes no commitment to update or to keep current the information in this manual, or to notify any person organization of the updates. Please Note: For the most up-to-date version of this manual, please see our web site at [www.supermicro.com](http://www.supermicro.com).

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software, if any, and documentation may not, in whole or in part, be copied, photocopied, reproduced, translated or reduced to any medium or machine without prior written consent.

DISCLAIMER OF WARRANTY ON SOFTWARE AND MATERIALS. You expressly acknowledge and agree that use of the Software and Materials is at your sole risk. FURTHERMORE, SUPER MICRO COMPUTER INC. DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE OR MATERIALS IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SUPER MICRO COMPUTER INC. OR SUPER MICRO COMPUTER INC. AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. SHOULD THE SOFTWARE AND/OR MATERIALS PROVE DEFECTIVE, YOU (AND NOT SUPER MICRO COMPUTER INC. OR A SUPER MICRO COMPUTER INC. AUTHORIZED REPRESENTATIVE) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICE, REPAIR, OR CORRECTION.

LIMITATION OF LIABILITY. UNDER NO CIRCUMSTANCES INCLUDING NEGLIGENCE, SHALL SUPER MICRO COMPUTER INC. BE LIABLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR MATERIALS, EVEN IF SUPER MICRO COMPUTER INC. OR A SUPER MICRO COMPUTER INC. AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Super Micro's total liability for all claims will not exceed the price paid for the hardware product.

Manual Revision 1.14  
Release Date: 5/14/2020

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2020 by Super Micro Computer, Inc.  
All rights reserved.  
Printed in the United States of America

---

## Document Revision History

Date	Revision	Description
05/14/2020	1.14	Initial document.

---

## Contents

1	LLDP Overview.....	5
2	EnablingLLDP .....	6
3	Configuring LLDP Parameters .....	7
3.1	Configuring LLDP TLV .....	10
3.1.1	Configuring LLDP Timers .....	13
3.1.2	Message Transmit Interval.....	13
3.1.3	Message Transmit Holdtime Multiplier .....	13
3.1.4	ReinitializationDelay .....	14
3.1.5	Transmit Delay .....	14
3.1.6	Notification Interval .....	15
3.2	LLDP Configuration .....	15
	Contacting Supermicro.....	22

---

# 1 LLDP Overview

---

LLDP is a neighbor discovery protocol that is used for network devices to advertise information about themselves to other devices on the network. This protocol runs over the data-link layer, which allows two systems running different network layer protocols to learn about each other.

Devices in a LAN maintain operations-related configuration information in management information bases (MIBs). LLDP helps avoid misconfiguration problems in LANs by enabling LAN devices to be aware of other devices' configuration information.

LLDP supports a set of attributes that it uses to discover neighbor devices. These attributes contain type, length, and value descriptions and are referred to as TLVs. LLDP supported devices can use TLVs to receive and send information to their neighbors. Details such as configuration information, device capabilities, and device identity can be advertised using LLDP.

Supermicroswitches provides the following LLDP features:

- Support all mandatory TLVs (chassis identifier, port identifier and time-to-live).
- Support optional TLVs - port description, system name, system description, system capabilities and management address.
- Support organizationally specific optional TLVs - port VLAN identifier, port and protocol VLAN identifier, VLAN name, MAC or PHY configuration or status, link aggregation and maximum frame size.
- Provide support for notifications through traps.

An LLDP agent operates in any one of the following three modes:

1. Transmit-only mode: The agent can only transmit the information about the capabilities and the status of the local system.
2. Receive-only mode: The agent can only receive information about the capabilities and the status of the remote systems.
3. Transmit and receive mode: The agent can transmit the local system capabilities and status information and receive the capabilities and status information of remote systems.

The LLDP transmit only mode sends the local device's information at regular intervals in LLDP TLV's. Whenever the transmit mode is disabled, the device transmits an LLDP PDU with a time-to-live (TTL) TLV containing "0" in the information field. Upon reception of a PDU with TLV 0, remote devices are then enabled to remove the information associated with this local device from their databases.

The LLDP receive only mode receives remote device's information and updates the remote system's LLDP MIB database. When new or updated information is received, the receive module initiates a timer for a valid duration indicated by the TTL TLV in the received LLDP PDU. The remote system's information is removed from the database when an LLDP PDU is received with TTL TLV containing "0" in its information field.

Parameter	Default Value
LLDP Status (global)	Disabled
LLDP Status (interface level)	Transmit and receive
TLV	None
HoldtimeMultiplier	4
Message Transmit Interval	30
ReinitializationDelay	2
Transmit Delay	2
Trap Notification Interval	5
Chassis ID	Switch MAC address
Chasis ID Subtype	MAC address
Port ID Subtype	Interface name
System Capabilities	None
Notification	Disabled
Notification Type	Mis-configuration

## 2 Enabling LLDP

LLDP is disabled by default in Supermicro switches. Follow the steps below to enable LLDP.

Step	Command	Description
Step 1	<code>configure terminal</code>	Enters the configuration mode
Step 2	<code>set lldp enable</code>	Enables LLDP in the switch.
Step 3	<b>End</b>	Exits the configuration mode.
Step 4	<code>show lldp</code>	Displays the LLDP global configuration details



The “set lldp disable” command disables LLDP in the switch.

---

## 3 Configuring LLDP Parameters

---

Once LLDP is enabled globally, it is enabled on all supported interfaces by default. Supermicro switches provide a user configuration to place an interface in only send or only receive mode.

Other LLDP parameters that can be configured in Supermicro switches are Notification type, Chassis-ID Sub-type and Port-ID Sub-type.

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	interface <interface-type><interface-id> or interface range <interface-type><interface-id> ....	(Optional) Enters the interface configuration mode.  interface-type – may be any of the following: fx-ethernet – fx cx-ethernet – cx port-channel – po  interface-id is in slot/port format for all physical interfaces.  To configure multiple interfaces, use the “interface range ...” command. To provide a range use a hyphen (-) between the start and end interface numbers. E.g.: int range fx 0/1-10  To provide multiple interfaces or ranges, separate with a comma (,). E.g.: int range fx 0/1-10, fx 0/20  If multiple interfaces are provided, the next step will perform the particular configuration on all these interfaces.
Step 3	lldp {transmit   receive}	(Optional) Sets LLDP admin status on an interface to Transmit or Receive
Step 4	lldp notification [remote-table-chg][mis-configuration]	(Optional) Enables LLDP trap notification on an interface.

		<p>remote-table-chg - Trap notification for change in neighbor's table.</p> <p>mis-configuration - Trap notification for mis-configuration.</p>
Step 5	<pre>lldp port-id-subtype { if-alias   port-comp &lt;string(255)&gt;   mac-addr   if-name   local &lt;string(255)&gt; }</pre>	<p>(Optional) Configures LLDPport IDsubtype and port IDvalue</p> <p>if-alias - interface alias</p> <p>port-comp - port component</p> <p>mac-addr - MAC address</p> <p>if-name - interface name</p> <p>local - locally assigned</p> <p>The default value for port-id-subtype is if-name. Note: The if-alias option can be used only for the interfaces which have valid description configured.</p>
Step 6	Exit	Exitsinterface configuration mode.
Step 7	<pre>lldp chassis-id-subtype { chassis-comp &lt;string(255)&gt;   if-alias   port-comp &lt;string(255)&gt;   mac-addr   nw-addr   if-name   local &lt;string(255)&gt; }</pre>	<p>(Optional) Configures LLDPchassis IDsubtype and chassis IDvalue.</p> <p>The chassis identifier value can only be set for the chassis-component and local system subtypes. For all other subtypes, the value is taken from the system automatically.</p> <p>chassis-comp - chassis component</p> <p>if-alias - management interface alias</p> <p>port-comp - port component</p> <p>mac-addr - MAC address</p>



		<p>nw-addr - network address</p> <p>if-name - interface name</p> <p>local - locally assigned</p> <p>The default value for chassis-id-subtype is mac-addr.</p> <p>Note: To use the if-alias option, the management interface must have been configured with valid description.</p>
Step 8	End	Exits the configuration mode.
Step 9	<p>show lldp interface [&lt;interface-type&gt;&lt;interface-id&gt;]</p> <p>show lldp neighbors [chassis-id &lt;string(255)&gt; port-id &lt;string(255)&gt;] [&lt;interface-type&gt;&lt;interface-id&gt;][detail]</p> <p>show lldp traffic [&lt;iftyp&gt;&lt;ifnum&gt;]</p> <p>show lldp errors</p> <p>show lldp statistics</p>	<p>Displays LLDP configuration details on a particular interface or all interfaces</p> <p>Displays information about neighbors learned on an interface or all interfaces</p> <p>Displays LLDP counters, including the number of frames sent, received, discarded, etc.</p> <p>Displays information about errors such as memory allocation failures, queue overflows, table overflows, etc.</p> <p>Displays the LLDP remote table statistics information</p>
Step 10	clear lldp counters	Clears LLDP transmit and receive statistics
Step 11	clear lldp table	Clears LLDP neighbors information



These commands reset the particular configuration to its default value.

lldp {transmit | receive}

no lldp notification


no lldp tlv-select basic-tlv { [port-descr] [sys-name] [sys-descr] [sys-capab] [mgmt-addr {all | ipv4 <ucast\_addr> | ipv6 <ip6\_addr>}] }

no lldp tlv-select dot1tlv {[port-vlan-id] [protocol-vlan-id {all | <vlan-id>}] [vlan-name {all | <vlan-id>}] }

no lldp tlv-select dot3TLV { [macphy-config] [link-aggregation] [max-framesize] }


## 3.1 Configuring LLDP TLV

Supermicro switches provide support for user configuration of LLDP TLV's. The TLV types supported by Supermicro switches are: Basic TLV, DOT1 TLV and DOT3 TLV. The figure below displays the TLV types and their content.

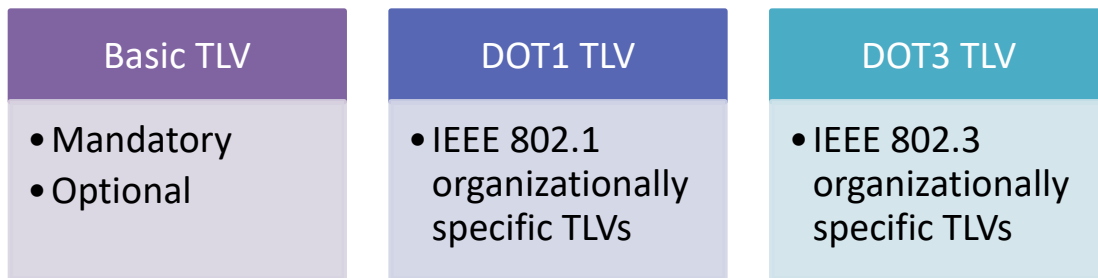

**Figure LLDP-1: LLDP TLV Types**

The content of the various TLVs supported by Supermicro switches are specified in the figure below.

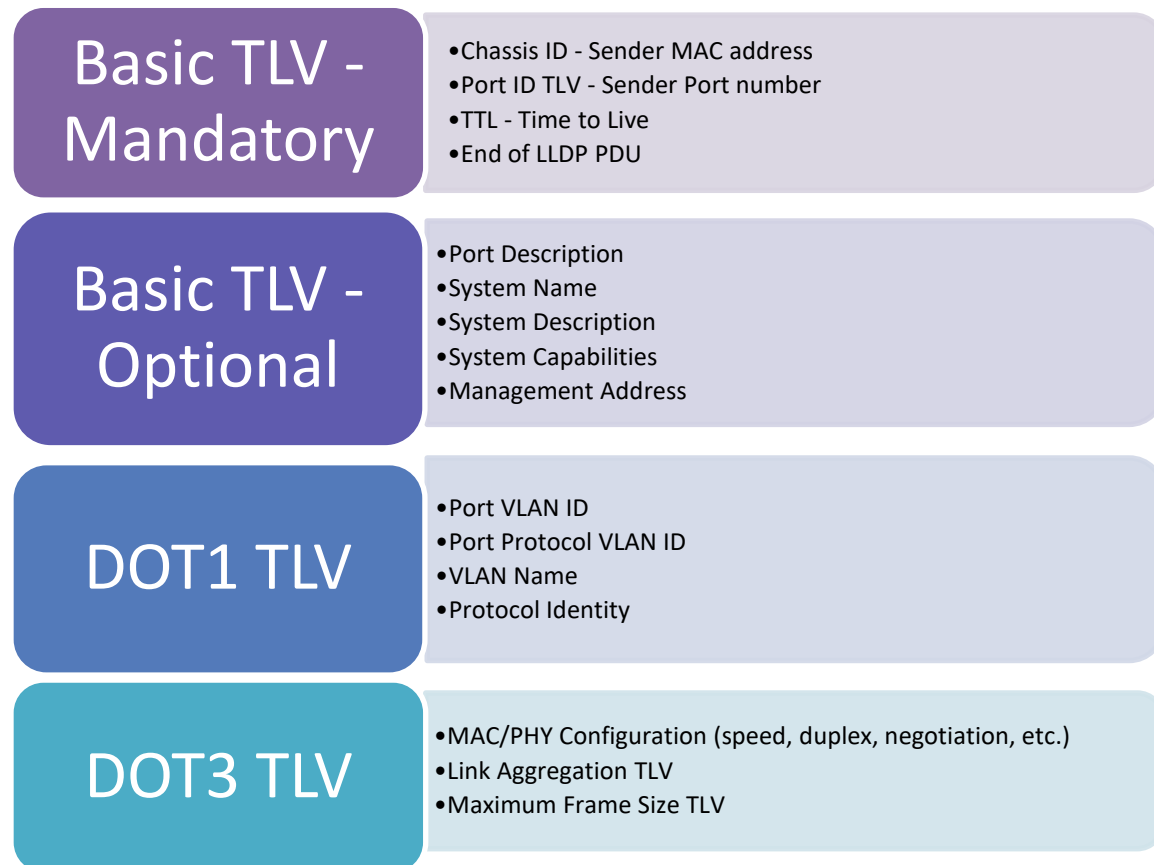

**Figure LLDP-2: LLDP TLV Content**

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	interface <interface-type><interface-id> or interfacerange <interface-type><interface-id> ....	<p>(Optional) Enters the interface configuration mode.</p> <p>interface-type – may be any of the following:  fx-ethernet – fx  cx-ethernet – cx  port-channel – po</p> <p>interface-id is in slot/port format for all physical interfaces.</p> <p>To configure multiple interfaces, use the “interface range ...” command. To provide a range use a hyphen (-) between the start and end interface numbers. E.g.: int range fx 0/1-10</p> <p>To provide multiple interfaces or ranges, separate with a comma (,). E.g.: int range fx 0/1-10, fx 0/20</p> <p>If multiple interfaces are provided, the next step will perform the particular configuration on all these interfaces.</p>
Step 3	lldp tlv-select basic-tlv { [port-descr] [sys-name] [sys-descr] [sys-capab] [mgmt-addr {all   ipv4 <uicast_addr>   ipv6 <ip6_addr>}]}	<p>(Optional)</p> <p>Enables the basic TLV transmission on a given port</p> <p>port-descr - Port description TLV</p> <p>sys-name - System name TLV</p> <p>sys-descr- System description TLV</p> <p>sys-capab - System capabilities TLV</p> <p>mgmt-addr all- Enables the transmission of the management address on the current interface. If no management address is present or configured in the system, the</p>

		<p>switch's MAC address will be used for transmission.</p> <p><code>mgmt-addr ipv4 <i>ucast-addr</i></code> - Enables the transmission of a particular ipv4 address on the current interface.</p> <p><code>mgmt-addr ipv6 <i>ipv6-addr</i></code> - Enables the transmission of a particular ipv6 address on the current interface.</p>
Step 4	<pre>lldp tlv-select dot1tlv {[port-vlan-id] [protocol- vlan-id {all   &lt;vlan-id&gt;}] [vlan-name {all   &lt;vlan- id&gt;}]}</pre>	<p>(Optional) Configure dot1 TLV types to be transmitted on a port</p> <p><code>port-vlan-id</code> - Port VLAN identifier TLV. The keyword <code>port-vlan-id</code> keyword is not supported.</p> <p><code>protocol-vlan-id</code> - Protocol VLAN identifier TLV. The keyword <code>protocol-vlan-id</code> is not supported.</p> <p><code>vlan-name</code> - VLAN name TLV</p> <p>NOTE: VLAN name must be configured prior to this LLDP configuration.</p>
Step 5	<pre>lldp tlv-select dot3tlv { [macphy-config] [link- aggregation] [max-framesize] }</pre>	<p>(Optional) Configure dot3 TLV types to be transmitted on a port</p> <p><code>macphy-config</code> - MAC or PHY TLV.</p> <p><code>link-aggregation</code> - Link aggregation TLV.</p> <p><code>max-framesize</code> - Maximum frame size TLV.</p>
Step 6	End	Exits the configuration mode.
Step 7	<pre>show lldp interface [&lt;interface-type&gt;&lt;interface- id&gt;]</pre> <pre>show lldp local {[&lt;interface-type&gt;&lt;interface-id&gt;   [mgmt-addr]}</pre>	<p>Displays LLDP configuration details on a particular interface or all interfaces</p> <p>Displays the current switch information that will be used to populate outbound LLDP</p>

		advertisements for a specific interface or all interfaces
--	--	---

### 3.1.1 Configuring LLDP Timers

Supermicro switches allow for user configuration of LLDP timers:

- Transmit Interval
- Holdtime Multiplier
- ReinitializationDelay
- Transmit Delay
- Notification Delay

### 3.1.2 Message Transmit Interval

The message transmit interval is the period between transmission of the periodic LLDP advertisements. The default message transmit interval is 30 seconds.

Supermicro switches allow for user configuration of the message transmit interval. Follow the below steps to change the message transmit interval.

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	lldp transmit-interval <seconds(5-32768)>	(Optional) Configures the message transmit interval, range of 5-32768.
Step 3	End	Exits the configuration mode.
Step 4	show lldp	Displays the LLDP global information



The “no lldp transmit-interval” command resets the message transmit interval to its default value.

### 3.1.3 Message Transmit Holdtime Multiplier

The Message Transmit Holdtime Multiplier is used to calculate the time-to-live (TTL) value sent in LLDP advertisements. The time-to-live informs the receiving LLDP agent of the time to retain remote LLDP information if LLDP advertisements are not received periodically.

The TTL is calculated as: the minimum of ((Transmission Interval \* Holdtime Multiplier), or 65536)

The default holdtime multiplier is 4 seconds. The default TTL is: 4\*30 = 120 seconds. Supermicro switches allow for the user configuration of the message transmit holdtime multiplier. Follow the steps below to change the message transmit holdtime multiplier.

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	lldp holdtime-multiplier <value(2-10)>	(Optional)

		Configures the message transmit holdtimemultiplier, range of 2-10.
Step 3	End	Exits the configuration mode.
Step 4	show lldp	Displays the LLDP global information



The “no lldpholdtime-multiplier” command resets the message transmit holdtimemultiplier to its default value.

### 3.1.4 ReinitializationDelay

When LLDP ports are disabled or the link goes down, LLDP is reinitialized on a port. The delay between the port going down and the reinitialization is called the reinitialization delay. When LLDP is reinitialized on a port, all information in the remote systems LLDP MIB associated with this port is deleted.

Supermicro switches allow user configuration of the reinitialization delay. Follow the steps below to change the reinitialization delay.

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	lldpreinitialization-delay <seconds(1-10)>	(Optional) Configures the reinitialization delay, range of 1-10.
Step 3	End	Exits the configuration mode.
Step 4	show lldp	Displays the LLDP global information



The “no lldpreinitialization-delay” command resets the reinitialization delay to its default value.

### 3.1.5 Transmit Delay

Any change in local LLDP MIB variables initiates the transmission of LLDP advertisements. The delay between the successive transmissions of such advertisements is called the Transmit Delay. The transmit delay helps prevent unnecessary LLDP transmissions when rapid changes occur in local LLDP MIB objects.

Supermicro switches allow for user configuration of the message transmit delay. Follow the steps below to change the message transmit delay.

Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	lldptx-delay <seconds(1-8192)>	(Optional)

		Configures the message transmit delay, range of 1-8192.  NOTE: The Txdelay should be less than 0.25 * message Txinterval
Step 3	End	Exits the configuration mode.
Step 4	show lldp	Displays the LLDP global information



The “no lldptx-delay” command resets the message transmit delay to its default value.

### 3.1.6 Notification Interval

The Notification Interval is the time interval between successive periodic SNMP notifications about LLDP MIB changes. Any change in LLDP neighbors that occurs between SNMP notifications is not transmitted; only state changes that exist at the expiry of the notification interval are included in the transmission.

Supermicro switches allow for user configuration of the notification interval. Follow the steps below to change the the notification interval.


Step	Command	Description
Step 1	configure terminal	Enters the configuration mode
Step 2	lldp notification-interval <seconds(5-3600)>	(Optional) Configures the notification interval, range of 5-3600.
Step 3	End	Exits the configuration mode.
Step 4	show lldp	Displays the LLDP global information



The “no lldp notification-interval” command resets the notification interval to its default value.

## 3.2 LLDP Configuration

The example below shows the commands used to configure LLDP by connecting two switches: Switch A and Switch B.

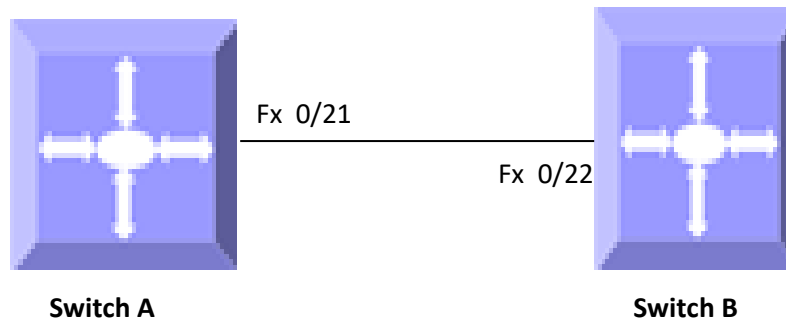

**Figure LLDP-3: LLDP Configuration Example**

Switch A

```
SMIS# configure terminal
```

```
SMIS(config)# set lldp enable
```

```
SMIS(config)# end
```

```
SMIS# show lldp
```

LLDP is enabled

```
Transmit Interval    : 30
```

```
Holdtime Multiplier  : 4
```

```
Reinitialization Delay : 2
```

```
Tx Delay             : 2
```

```
Notification Interval : 5
```

```
Chassis Id SubType   : Mac Address
```

```
Chassis Id           : 00:30:48:e3:04:75
```

```
SMIS# show lldp neighbors
```

Capability Codes :

(R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device,  
(W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Chassis ID	Local Intf	Hold-time	Capability	Port Id
00:30:48:e3:70:bc	Fx0/21	120		Fx0/22

Total Entries Displayed : 1

```
SMIS(config)# lldp chassis-id-subtype if-name
```

```
SMIS(config)# lldp holdtime-multiplier 7
```

```
SMIS(config)# lldp notification-interval 100
```

```
SMIS(config)# lldp preinitialization-delay 5
```

```
SMIS(config)# lldp preinitialization-delay 9
```

```
SMIS(config)# lldp preinitialization-delay 10
```

```
SMIS(config)# lldp transmit-interval 100
```

```
SMIS(config)# lldp transmit-interval 10
```

```
SMIS(config)# end
```



```

SMIS(config)# interface Fx 0/21
SMIS(config-if)# lldp notification remote-table-chg
SMIS(config-if)# lldp port-id-subtype if-name
SMIS(config-if)# lldp tlv-select basic-tlv port-descrmgmt-addr all
SMIS(config-if)# exit
SMIS(config)# vlan 1
SMIS(config-vlan)# name vlan1
SMIS(config-vlan)# exit
SMIS(config)# interface Fx 0/21
SMIS(config-if)# lldp tlv-select dot1tlv vlan-name 1
SMIS(config-if)# lldp tlv-select dot3tlv macphy-config
SMIS(config-if)# end

```

```

SMIS# show lldp
LLDP is enabled
Transmit Interval    : 10
Holdtime Multiplier  : 7
Reinitialization Delay : 10
Tx Delay             : 2
Notification Interval : 100
Chassis Id SubType   : Interface Name
Chassis Id           : eth0

```

```

SMIS# show lldp neighbors
Capability Codes :
(R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device,
(W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

```

Chassis ID	Local Intf	Hold-time	Capability	Port Id
00:30:48:e3:70:bc	Fx0/21	120		Fx0/22

```
Total Entries Displayed : 1
```

```

SMIS# show lldp errors
Total Memory Allocation Failures : 0
Total Input Queue Overflows      : 0
Total Table Overflows            : 0

```

```

SMIS# show lldp traffic
Total Frames Out      : 71
Total Entries Aged    : 0
Total Frames In       : 28
Total Frames Received In Error : 0
Total Frames Discarded : 0
Total TLVS Unrecognized : 0
Total TLVs Discarded   : 0

```

```

SMIS# show lldp interface Fx 0/21
Fx0/21:
Tx State      : Enabled
Rx State      : Enabled

```

```

Tx SEM State      : IDLE
Rx SEM State      : WAIT FOR FRAME
Notification Status : Enabled
Notification Type  : Remote Table Change
SMIS# show lld statistics
Remote Table Last Change Time : 217700
Remote Table Inserts      : 1
Remote Table Deletes      : 0
Remote Table Drops       : 0
Remote Table Ageouts     : 0
Remote Table Updates     : 0

```

```

SMIS# show lldp local Fx 0/21
Port Id SubType      : Interface Name
Port Id              : Slot0/21
Port Description     :
Enabled TxTlvs      : Port Description, Management Address, Mac Phy

```

```

Extended 802.3 TLV Info
-MAC PHY Configuration & Status
Auto-Neg Support & Status : Supported, Enabled
Advertised Capability Bits : 6c11
10base-T(HD)
10base-T(FD)
100base-TX(HD)
100base-TX(FD)
Asym and SymmPAUSE(FD)
1000base-T(FD)
Operational MAU Type    : 30
-Link Aggregation
Capability & Status     : Not Capable, Not In Aggregation
Aggregated Port Id     : 21
-Maximum Frame Size    : 1500

```

```

Extended 802.1 TLV Info
-Port VLAN Id          : 1
-Port & Protocol VLAN Id
Protocol VLAN Id   Support   Protocol VLAN Status   TxStatus
-----
0                Supported DisabledDisabled
-Vlan Name
Vlan Id   Vlan Name           TxStatus
-----
1         vlan1              Enabled
-----

```

```

SMIS# show running-config

```

---

Building configuration...

```
ID  Hardware Version      Firmware  OS   Boot Loader
0   SSE-X3548             1.0.0.0  6   0.0.0.0
```

```
vlan 1
ports fx 0/1-24 untagged
ports cx 0/1-3 untagged
name vlan1
exit
```

```
setlldp enable
lldp transmit-interval 10
lldp holdtime-multiplier 7
lldp preinitialization-delay 10
lldp notification-interval 100
lldp chassis-id-subtype if-name
interface Fx 0/21
lldp notification remote-table-chg
lldp tlv-select basic-tlv port-descrmgmt-addr all
lldp tlv-select dot3tlv macphy-config
lldp tlv-select dot1tlv vlan-name 1
exit
```

Switch B

```
SMIS# configure terminal
SMIS(config)# set lldp enable
SMIS(config)# end
SMIS# show lldp
```

```
LLDP is enabled
Transmit Interval   : 30
Holdtime Multiplier : 4
Reinitialization Delay : 2
Tx Delay            : 2
Notification Interval : 5
Chassis Id SubType  : Mac Address
Chassis Id          : 00:30:48:e3:70:bc
```

SMIS# **show lldp neighbors**

Capability Codes :  
(R) Router, (B) Bridge, (T) Telephone, (C) DOCSIS Cable Device,  
(W) WLAN Access Point, (P) Repeater, (S) Station, (O) Other

Chassis ID	Local Intf	Hold-time	Capability	Port Id
00:30:48:e3:04:75	Fx0/22	120		Fx0/21

---

Total Entries Displayed : 1

**SMIS# show lldp statistics**

Remote Table Last Change Time : 80900

Remote Table Inserts : 4

Remote Table Deletes : 3

Remote Table Drops : 0

Remote Table Ageouts : 3

Remote Table Updates : 7

**SMIS(config)# show lldp traffic**

Total Frames Out : 52

Total Entries Aged : 3

Total Frames In : 144

Total Frames Received In Error : 0

Total Frames Discarded : 0

Total TLVS Unrecognized : 0

Total TLVs Discarded : 0

**SMIS(config)# show lldp errors**

Total Memory Allocation Failures : 0

Total Input Queue Overflows : 0

Total Table Overflows : 0

**SMIS(config)# show lldp interface Fx 0/22**

Fx0/22:

Tx State : Enabled

Rx State : Enabled

Tx SEM State : IDLE

Rx SEM State : WAIT FOR FRAME

Notification Status : Disabled

Notification Type : Mis-configuration

**SMIS# show lldp local Fx 0/22**

Port Id SubType : Interface Alias

Port Id : Fx0/22

Port Description :

Enabled TxTlvs :

**Extended 802.3 TLV Info**

-MAC PHY Configuration & Status

Auto-Neg Support & Status : Supported, Enabled

Advertised Capability Bits : 6c11

10base-T(HD)

10base-T(FD)

100base-TX(HD)

100base-TX(FD)

Asym and SymmPAUSE(FD)

1000base-T(FD)

Operational MAU Type : 30

---

-Link Aggregation  
Capability & Status : Not Capable, Not In Aggregation  
Aggregated Port Id : 22  
-Maximum Frame Size : 1500

Extended 802.1 TLV Info

-Port VLAN Id : 1  
-Port & Protocol VLAN Id  
Protocol VLAN Id Support Protocol VLAN Status TxStatus

Protocol VLAN Id	Support	Protocol VLAN Status	TxStatus
0	Supported	Enabled	Disabled

-Vlan Name

Vlan Id	Vlan Name	TxStatus
1		Disabled

SMIS# show running-config

Building configuration...

ID	Hardware	Version	Firmware	OS	Boot Loader
0	SSE-X3548		1.0.0.0	6	0.0.0.0

vlan 1

ports fx 0/1-24 untagged

ports cx 0/1-3 untagged

exit

setlldp enable

---

# Contacting Supermicro

---

## Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000  
Fax: +1 (408) 503-8008  
Email: [marketing@supermicro.com](mailto:marketing@supermicro.com) (General Information)  
[support@supermicro.com](mailto:support@supermicro.com) (Technical Support)

Web Site: [www.supermicro.com](http://www.supermicro.com)

## Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390  
Fax: +31 (0) 73-6416525  
Email: [sales@supermicro.nl](mailto:sales@supermicro.nl) (General Information)  
[support@supermicro.nl](mailto:support@supermicro.nl) (Technical Support)  
[rma@supermicro.nl](mailto:rma@supermicro.nl) (Customer Support)

Web Site: [www.supermicro.com.nl](http://www.supermicro.com.nl)

## Asia-Pacific

Address: Super Micro Computer, Inc.  
3F, No. 150, Jian 1st Rd.  
Zhonghe Dist., New Taipei City 235  
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990  
Fax: +886-(2) 8226-3992  
Email: [support@supermicro.com.tw](mailto:support@supermicro.com.tw)

Web Site: [www.supermicro.com.tw](http://www.supermicro.com.tw)